


SJ A856

electric magnetic lock manual – horizontal version



Note: When the length of your gate is more than 1.5 meters, we recommend installing the Electric Lock. It is necessary to improving the safety and prevents the breakages at strong wind.

Electric Lock Part List

| | |
|---|---|
|  <p>Lock with 5m of power cables</p> |  <p>Lock Receiver</p> |
|  <p>Lock Keys (for manual release)</p> | |

Important Information:

1. Before you install the Electric Lock please be sure the gate is level, moves freely, and does not bind or block against barriers.
2. For the Electric Lock to work correctly, the gate must close firmly engaging the lock catch against the lock receiver.
3. The Electric Lock must be installed on the outside of the gate if on the Push-to-Open gate.
4. Due to the various mounting conditions, mounting hardware is not provided. Read this manual carefully to determine the mounting hardware required for your condition.
5. For dual gate, the lock must be installed on the Master Gate (gate 1) which is near the Control Box, and the lock receiver must be installed on the Slave Gate (gate 2).
(If the gate near the control box has been set up as slave gate, you can change the settings following “Installing and Operating Manual” → “Control Board Settings” → “Master/Slave Gate Set”)

Installation for Single Gate

- Step 1:** Disengage the clutch of the opener with the Triangular Key. You can move the gate by hand, so the gate can swing freely during installation of the Electric Lock.
- Step 2:** With the gate in the closed position, determine the best location for the lock and receiver. The lock and receiver must be level and aligned with the opener. The lock and receiver should have a solid surface or tube fence to provide stability.
- Step 3:** For Metallic Tube gate, if the thickness of the fence post is larger than or equal to 3mm, you can thread on the fence post, and fasten the lock and receiver only using bolts (without washers and nuts). Otherwise, drill holes through out the fence post, and fasten the lock and receiver with bolts, lock washers and nuts. For Chain Link gate, you will need U-Bolts, saddles, lock washers and nuts for the lock and receiver.
- Step 4:** Recheck the lock’s position and alignment, make sure the electric lock work correctly.
- Step 5:** Connect the lock’s power cables to the Lockmaster 901/902’s control board (See Figure E).
- Note:** Be sure that the clutch of the opener is engaged before you prepare to activate your opener (Use the Triangular Key).

Figure A


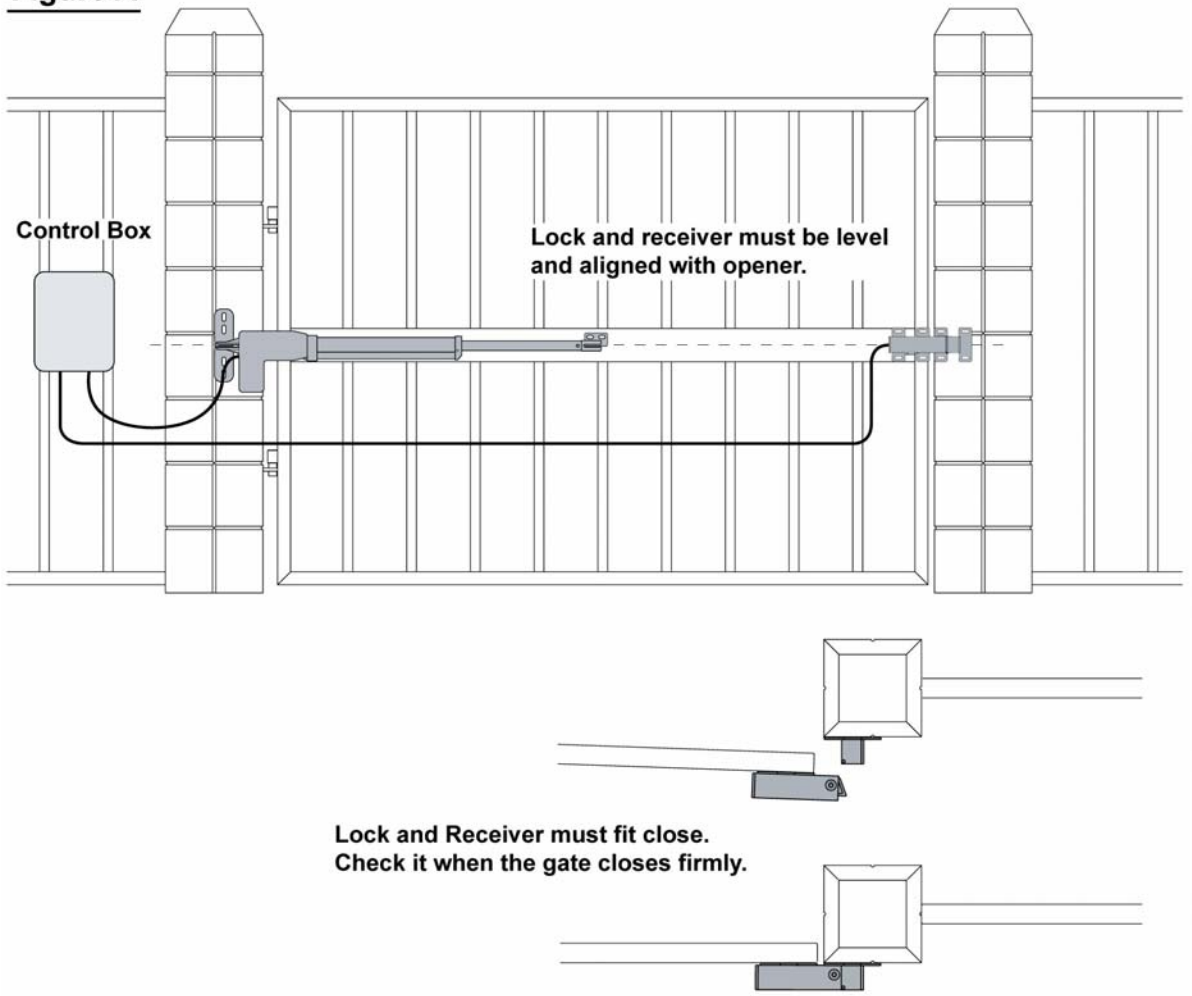


Figure B

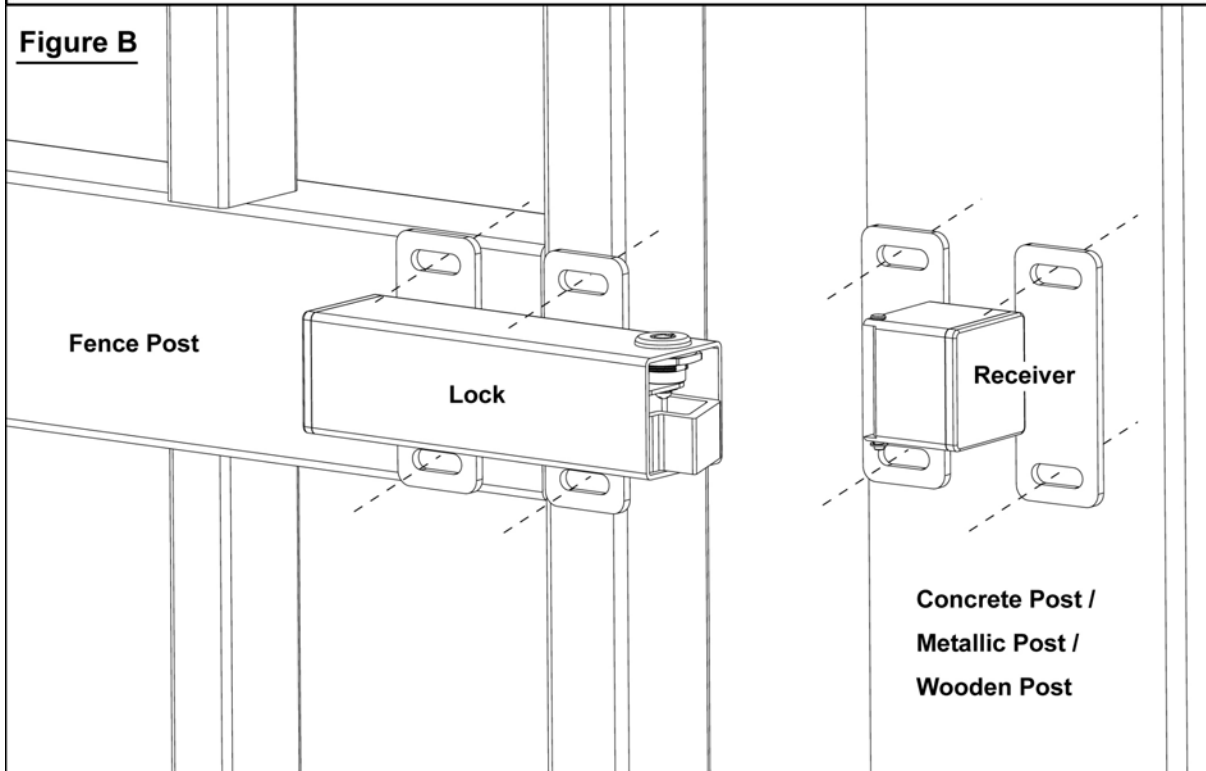

Installation for Dual Gate

Step 1: Disengage the clutches of the openers with the Triangular Key. You can move the

gates by hand, so the gates can swing freely during installation of the Electric Lock.

Step 2: With the gates in the closed position, determine the best location for the lock and receiver.

The lock and receiver must be level and aligned with the openers. The lock and receiver should

have a solid surface or tube fence to provide stability.

Step 3: For **Metallic Tube** gates, if the thickness of the fence post is larger than or equal to 3mm,


you can thread on the fence post, and fasten the lock and receiver only using bolts (without washers and nuts). Otherwise, drill holes through out the fence post, and fasten the lock and receiver with bolts, lock washers and nuts.


For **Chain Link** gates, you will need U-Bolts, saddles, lock washers and nuts for the lock and receiver.

Step 4: Recheck the lock's position and alignment, make sure the electric lock work correctly.



Step 5: Connect the lock's power cables to the LM 901/902's control board (See Figure E).

Note: Be sure that the clutches of the openers are engaged before you prepare to activate your openers (Use the Triangular Key).

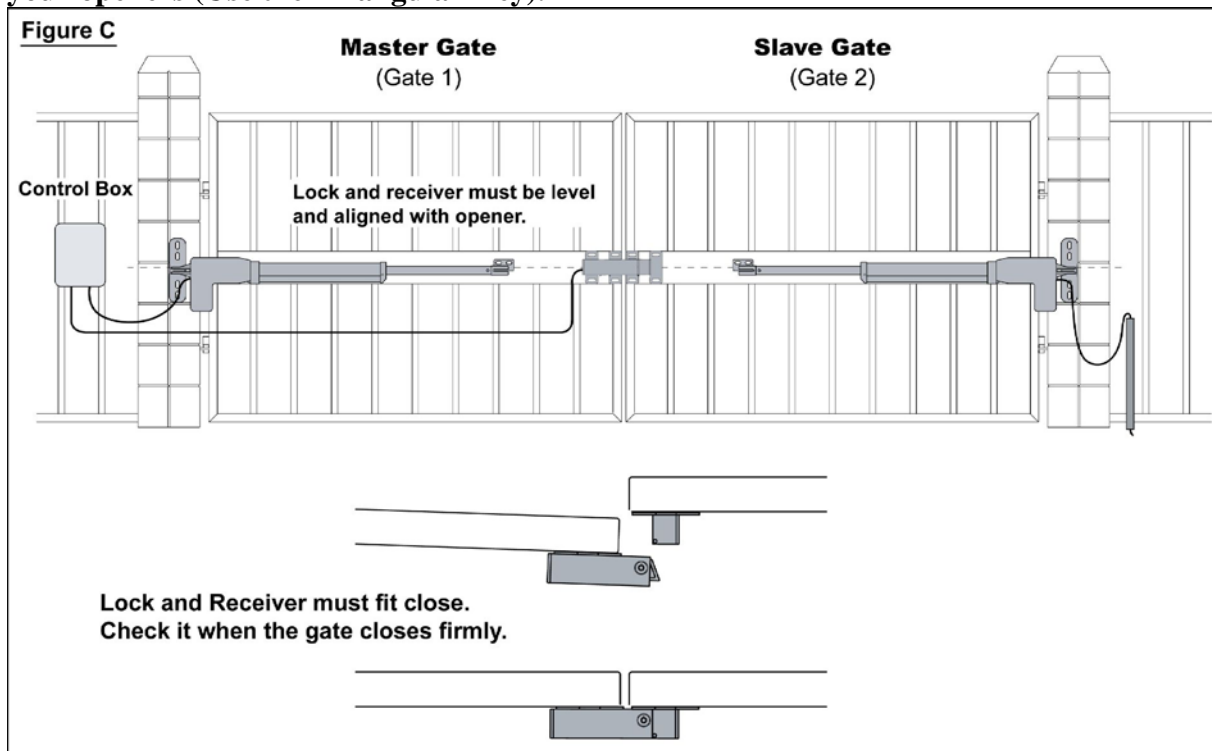

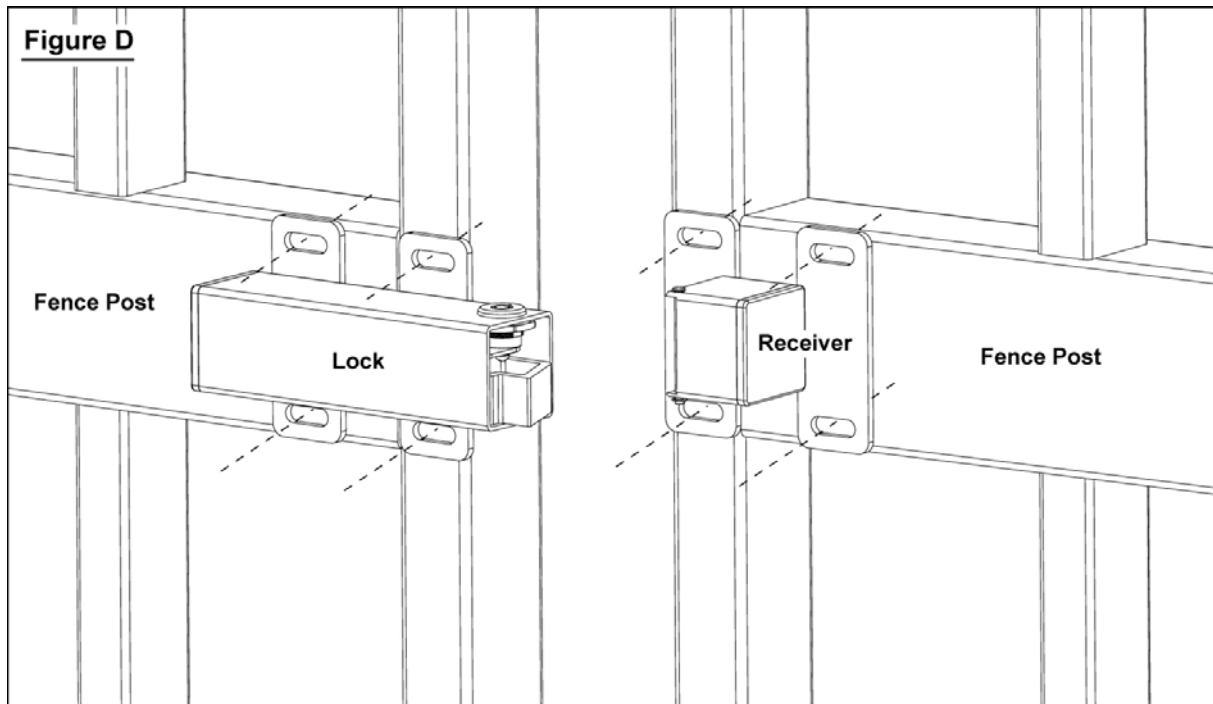

Connection to the SuperJack / EasyJack Printing board first to learn (with "auto" button) the whole gate opener system, and after learning to connect the lock to the PCB.

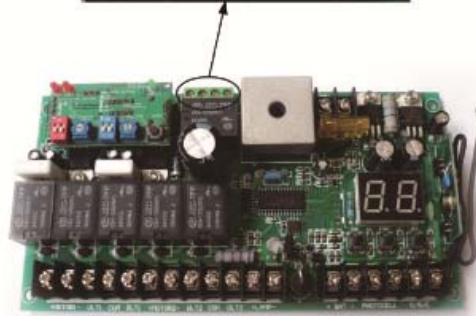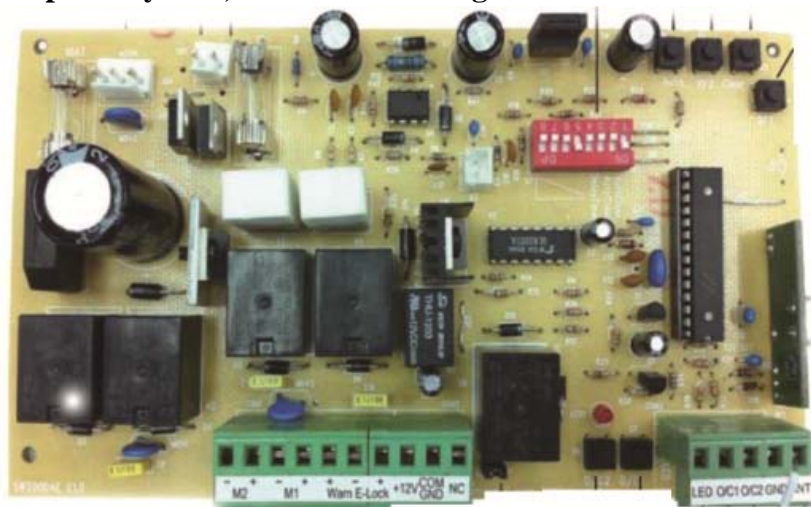

control board